

ONEFABRICPLUS®

Setup Instructions



1

Remove frame and graphic from bag.



2

Ensure "adjustable knobs" of frame are on the floor. Pull up display into upright position.




3

Connect latches together securely




4

Adjust leveling knobs for desired angle. OneFabricPlus™ display can now be moved easily into position.

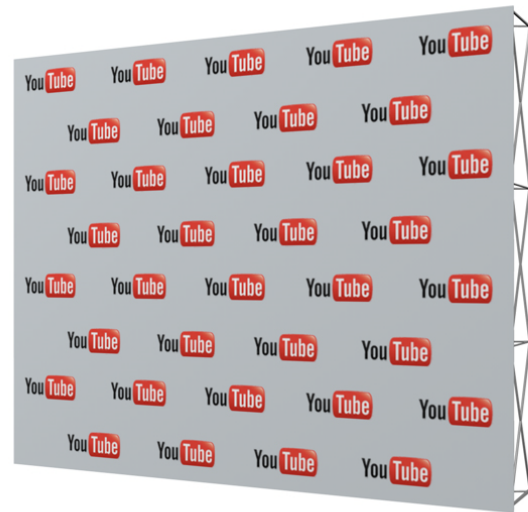

5

Attach graphic and enjoy!

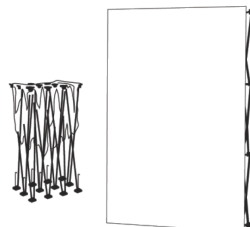


WARNING! DO NOT FORCE CLOSED.

To avoid damage, all latches must be disconnected before collapsing frame.


ONEFABRIC PLUS®

Graphic Installation

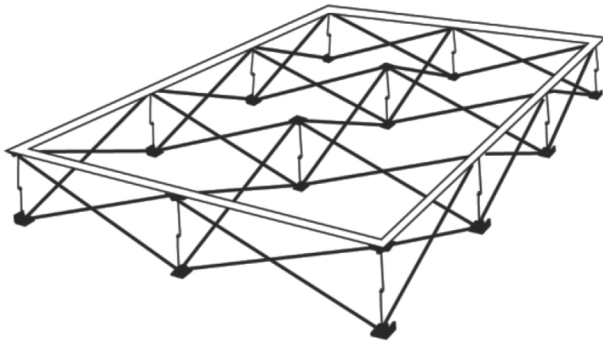


1

Assemble frame and lay flat on its back.
Remove existing graphic.

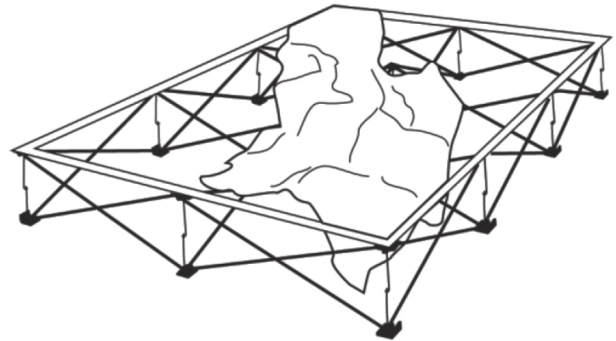

2

Starting at one corner, attach Velcro® on graphic to Velcro® on frame.
Overlap Velcro® of graphic a 1/4" on all sides of Velcro® of frame.
Note: Velcro® should not be flush.

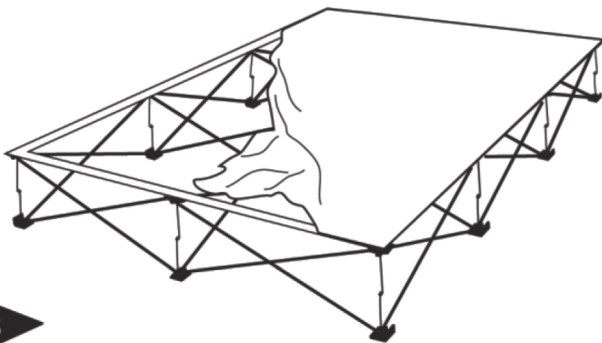


3

Work in continuous direction around the frame
until graphic is completely attached.



4

If needed, adjust Velcro® for taut fit.

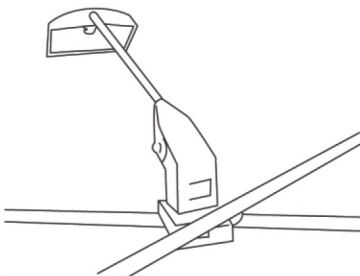

5

OPTIONAL
Attach lights to top of frame by sliding the plastic
X Blocks under the frames cross sections.

