

Claw Sail Sign

Product Parts

- 1 - Carry Case
- 2 - Right Base Pole
- 3 - Left Base Pole
- 4 - Right Top Pole
- 5 - Left Top Pole
- 6 - Right Post
- 7 - Left Post
- 8 - Pin
- 9 - Graphic
- 10 - Bungie with Clip (x2)




Display Set-Up

Step 1

Begin by removing all parts from the Carry Case (1) and place on a clean, flat surface.

Step 2


Insert the Left Post (7) into the Right Post (6) as shown below and insert Pin (8).

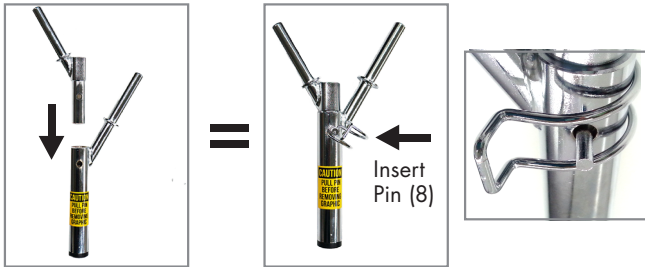

Step 3


Using two people, have one person stand in between the two poles and flex them together while the other person slides the Graphic (9) onto the poles as shown.

NOTE: One pole is longer than the other.

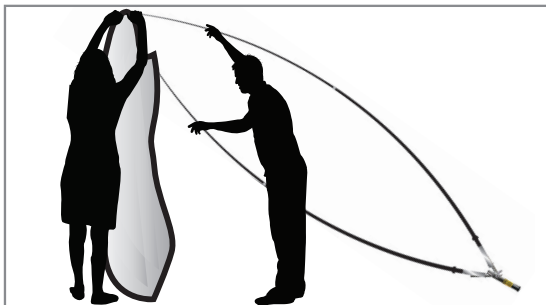


Step 4

Slide the Graphic (9) down the poles and connect the Bungie with Clips (10) to the tabs on the base of the poles as shown.

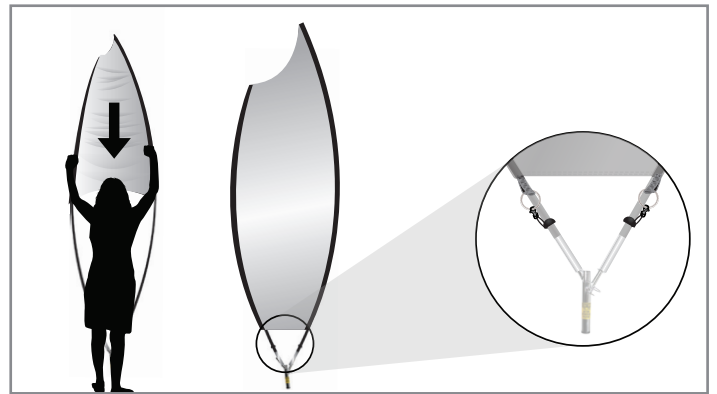

Disassembly

To disassemble, pull Pin (8) and fold unit closed. Remove Bungies (10) from pole. Slide Graphic (9) off the poles.

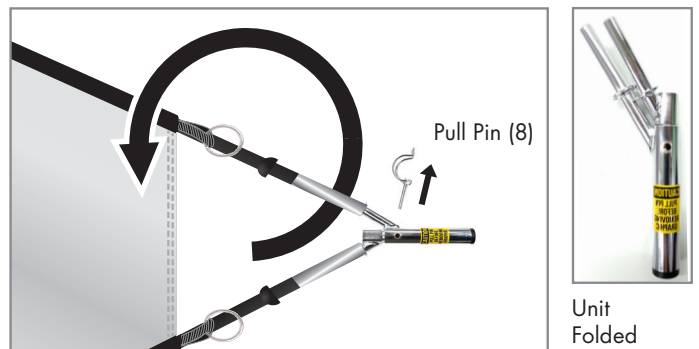

Storage & Care

Place all product parts into Carry Case and store in a cool dry location, away from direct sunlight. To clean, Machine wash on cold gentle cycle, air dry. Do not iron or dry clean the banner.