

WLM-MANDARIN B



Setup Instructions

- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

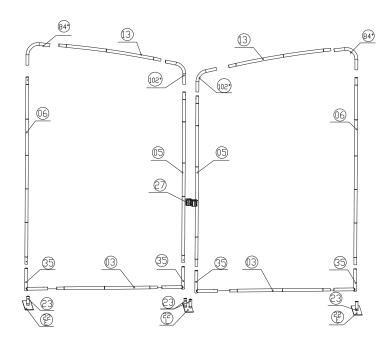

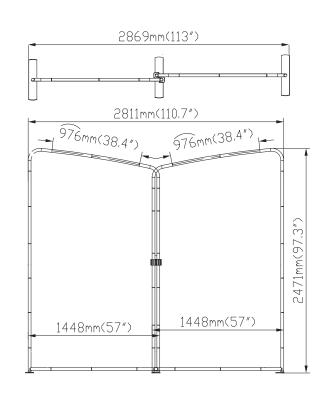

	Frame		Frame			Frame			Frame		Frame		Frame		T\	V kit	Shippir	ng Case	accessories
102°	2	(22 L	1		03	2									22.6"		CA900		2000A*2
848	2	(22) E	2												32"		CA500		
13	2	23	4												40"				
35	4	06	2																
27	1	05	2																
NO.	Quantity Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity Confirm	NO.	Quantity Confirm	NO.	Quantity	Confirm	NO.	Confirm	NO.	Confirm	