

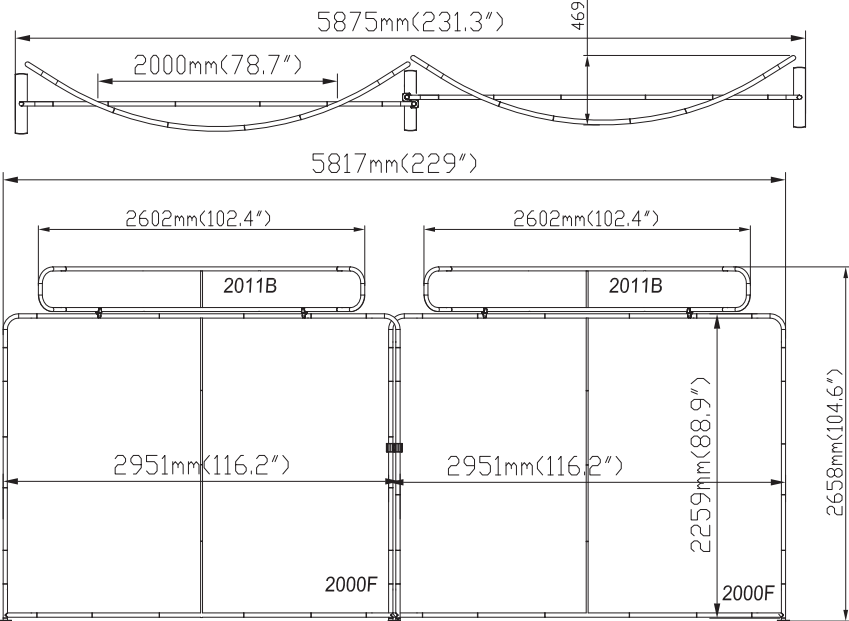


WLM-DOLPHIN C – Curved Header

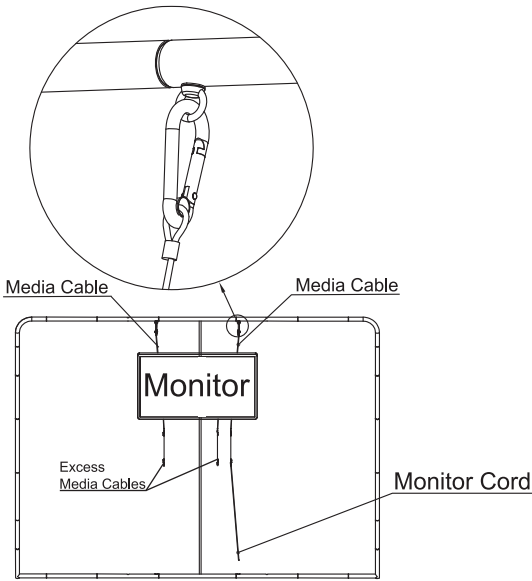

Setup Instructions

- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

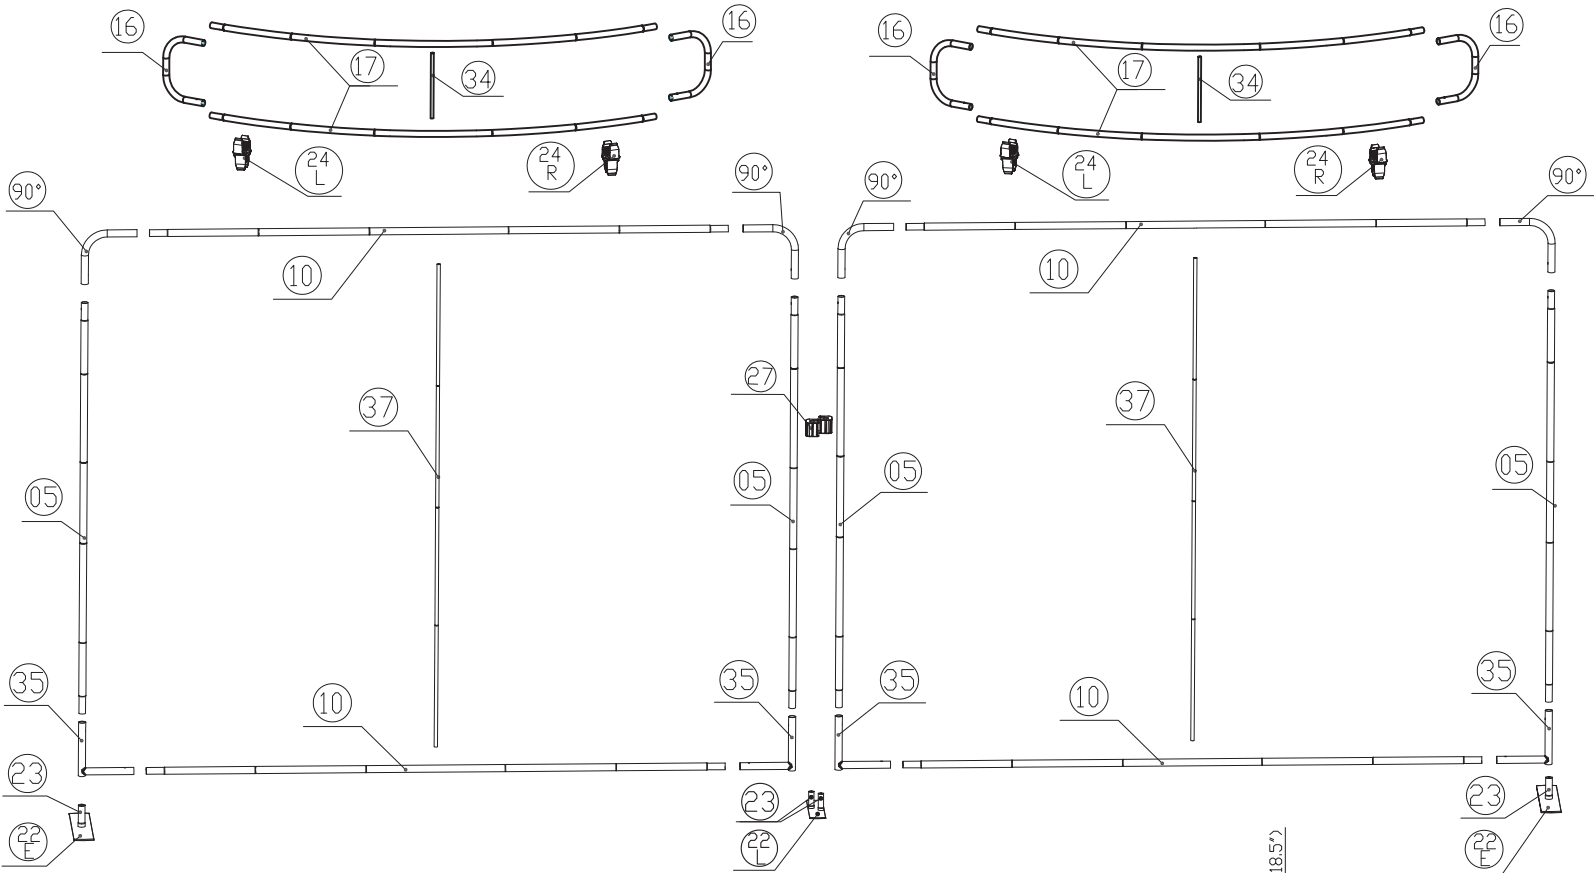

Frame			Frame			Frame			Frame			Frame			TV kit		Shipping Case		accessories	
22E	2		37	2		34	2								22.6"		CA900		2000F*2+2011B*2	
23	4		05	4		24R clear	4								32"		CA500			
90°	4		27	1		24L clear	4								40"					
10	4		16	4		22L	1													
35	4		17	4																
NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Confirm	NO.	Confirm		