Visual Merchandising (Creo)


MAIN STRUCTURE ASSEMBLY INSTRUCTIONS

SEE ATTACHED PAGES FOR DETAILED INSTRUCTIONS

- 1. Arrange all bases on floor, then attach all lower crossbars to base uprights by inserting button head into channel.
- 2. Slide all lower uprights over base uprights, then tighten knob of upright to secure, using top as tightening tool.
- 3. Slide uprights over lower uprights, then tighten knob of upright to secure, using top as tightening tool.
- 4. Attach all upper crossbars to upper uprights by inserting button head into channel.
- 5. Slide cone tops over upper uprights, then tighten cone top to secure.
- 6. See additional pages for accessory instructions.

NOTE: Although model shown below may differ from your model, assembly instructions remain the same.



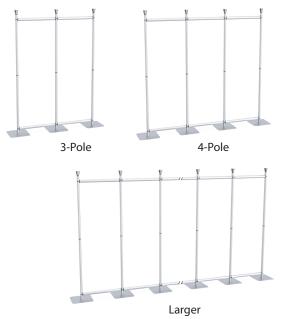

Applicable Products:








Visual Merchandising (Creo)


MAIN STRUCTURE ASSEMBLY INSTRUCTIONS


- 1. Arrange all bases on floor, then attach all lower crossbars to base uprights by inserting button head into channel.
- 2. Slide all lower uprights over base uprights, then tighten knob of upright to secure, using top as tightening tool.
- 3. Slide uprights over lower uprights, then tighten knob of upright to secure, using top as tightening tool.
- 4. Attach all upper crossbars to upper uprights by inserting button head into channel.
- 5. Slide cone tops over upper uprights, then tighten cone top to secure.
- 6. See additional pages for accessory instructions.

Step 3-A

NOTE: Although model shown below may differ from your model, assembly instructions remain the same.

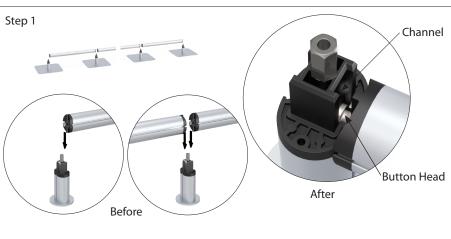

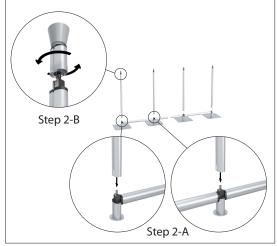

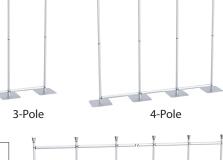

Larger

Step 5-B

Applicable Products:

