Formulate Accent Ladder 10

FMLT-WL10

Formulate™ Master Accents enhance the functionality of many Formulate Master 10' and 20' backwalls and add more real estate for messaging too! With monitor supports, literature pockets, shelves, tables, counters, and more, you are sure to find the accent that best suits your needs. Side tables and graphic headers are also available.

features and benefits:

- Premium aluminum tube frames with spigot assembly
- Easy to store and ship
- Quick to set up

- Rectangular shaped zipper pillowcase fabric graphics
- Kit includes: 29"w shelf
- Lifetime limited hardware warranty against manufacturer defects
- Small monitor mount , can hold 13-39" monitor/ max weight 20lbs

dimensions:

Hardware	Graphic
Assembled unit: 37.18"w x 93.18"h x 16.2"d 944mm(w) x 2367mm(h) x 411mm(d) Approximate weight with cases: 62 lbs / 28.1 kgs	Refer to related graphic template for more information. Visit: www.exhibitors-handbook.com/graphic-templates

Shipping	
Packing case(s): 1 OCH Case Shipping dimensions: 50"l x 29"w x 12"h 1270mm(l) x 737mm(w) x 305mm(h) Approximate total shipping weight (includes cases & graphics): 89 lbs / 40.4 kgs	

additional information:

Graphic material:
dye-sublimation zipper pillowcase fabric

Tabletop Colors

silver   black   mahogany   natural

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE. See Graphic Templates for graphic bleed specifications.
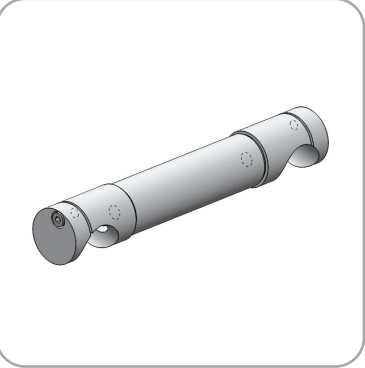
Included In Your Kit

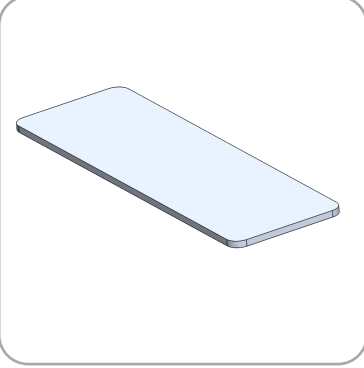**Tools, Components, & Connectors**

ALLEN KEY SET x1

ES 30 x14

TCH-30-B2B-100 x2

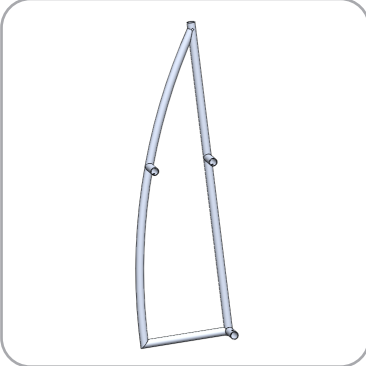LN114-S2-650 x2

LN114-SCRW x2

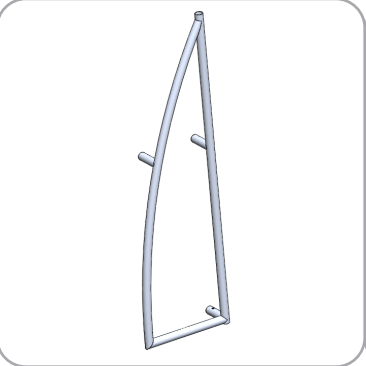WL-10-T6 x1

MM-SM x1

Graphics

FMLT-WL-10-G x1

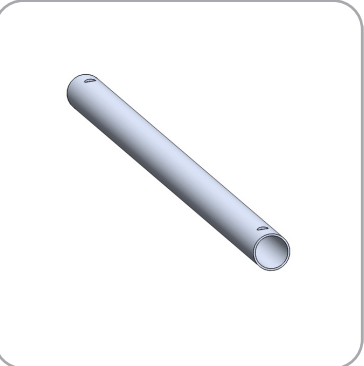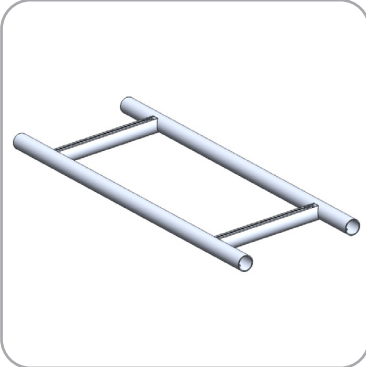# Included In Your Kit

Tubes

WL-10-T1 x1

WL-10-T2 x1

WL-10-T3 x4

WL-10-T4 x2

WL-10-T5 x1

Exploded View

FMLT-WL10

TCH-30

TCH-30

ES30

ES30

WL10-T3

WL10-T4

TC-30

TC-30

ES30

WL10-T3

ES30

ES30

WL10-T3

ES30

WL10-T4

ES30

TC-30

TC-30

ES30

ES30

FRAME A

WL10-T5

ES30

ES30

WL10-T2

ES30

ES30

WL10-T1

ES30

ES30

WL10-T3

ES30

LN114-SCRW

LN114-S2-650

LN114-SCRW

LN114-S2-650
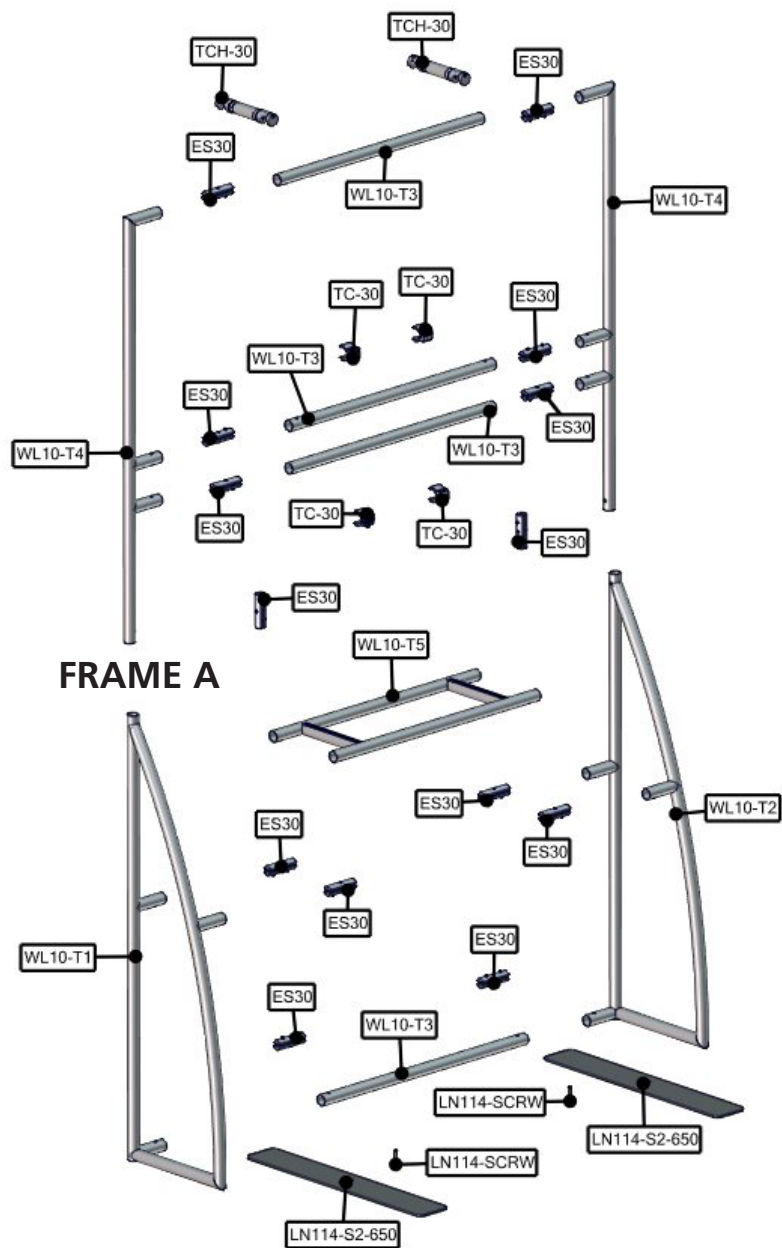
Labeling Diagram

FMLT-WL10

Overhead

FRAME A

A1
A2
A3
A4
A5
A6
A7
A8
A9
A10
A11
A12
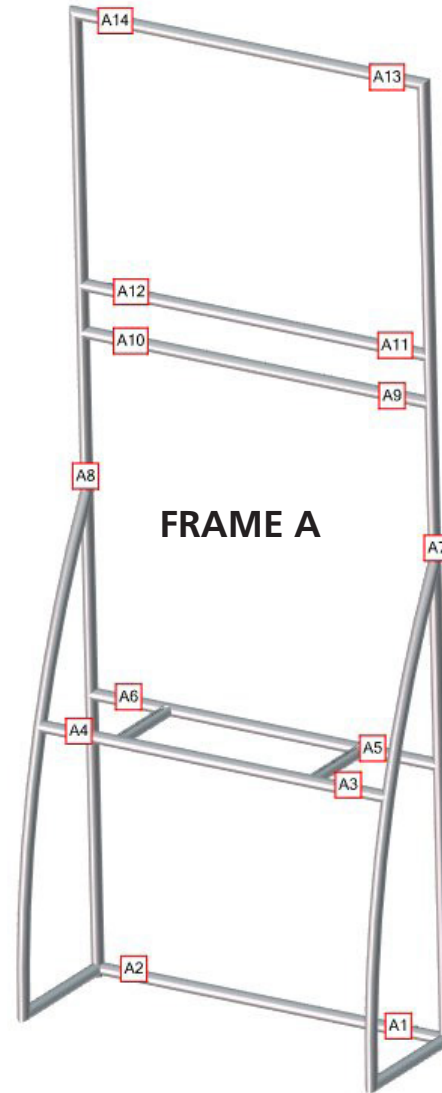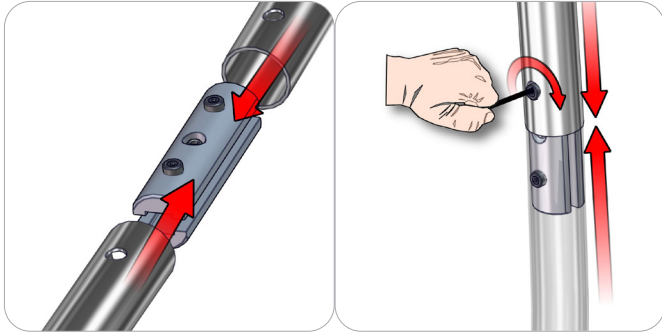A13
A14

Connection Methods

Formulate™ structures use a number of different yet simple connection methods. Your kit will include one or more of the connection methods shown below. Steps within the Kit Assembly will reference a specific method for each connection point.
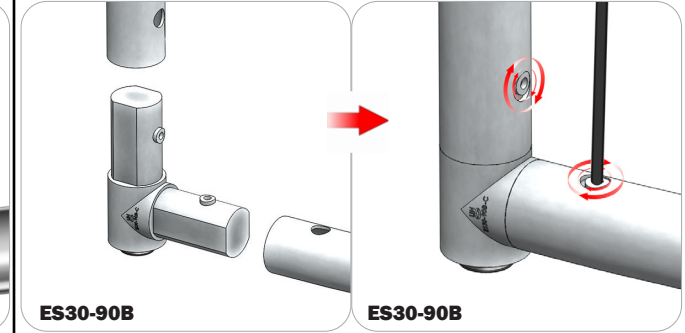
Connection Method 1:
ES30 / ES50 / ES75

Compress the unlocked connector and slide one tube onto each end. Lock both screws carefully using your allen key tool. Be sure to lock securely, but do not overtighten.

Connection Method 2:
Snap Buttons & Swage
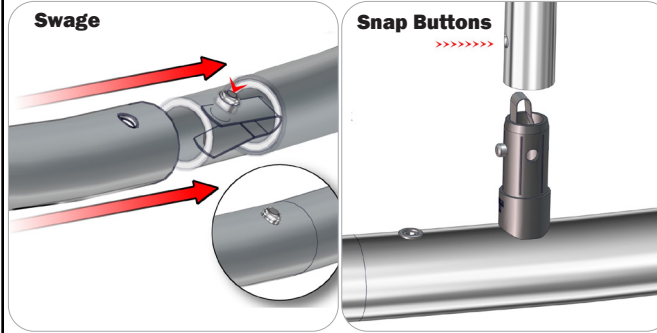
Swage

Snap Buttons

Locate the snap button on the connector or swage tube. Locate the hole on the corresponding tube. Press the snap button with your thumb and slide the tube and connector together so that the snap button snaps fully into the lock hole. To disassemble, press the snap button and pull apart.

Connection Method 3:
ES30-90B / ES30-I / ES30-C

ES30-90B

ES30-90B

Compress one unlocked end of the connector and slide it through one tube end. Compress the other end of the connector and slide the second tube on. Lock both screws carefully using your allen key tool. Be sure to lock securely, but do not overtighten.

Connection Method 4:
Tube Clamps

TCP

TC

TCH
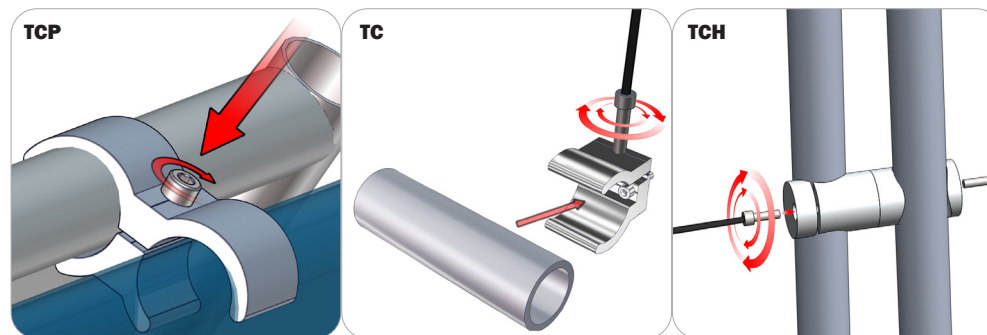
Be sure to fully assemble all frames before using clamps. With the clamp unlocked, place one tube of the first frame into the mouth of the clamp. Place the second tube (if applicable) into the second mouth of the clamp. With both frame's tubes in the clamp, be sure to lock securely, but do not overtighten.
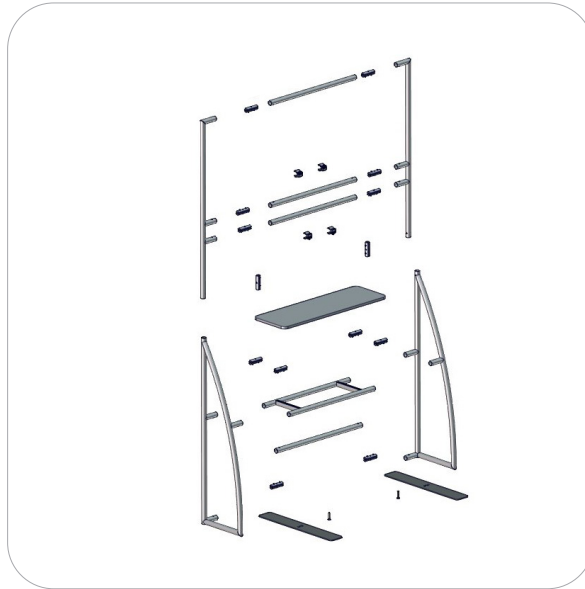
Kit Assembly

Step by Step:

Step 1.

Locate the components necessary for assembling the frame. Assemble Frame A in order according to the Labeling Diagram.
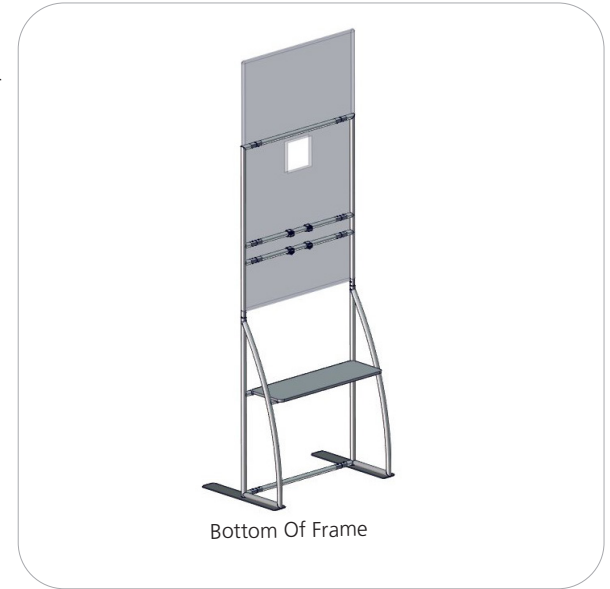
Please reference Connection Method 2 for more details.

Step 2.

Apply the graphic pillowcase over the Frame A.

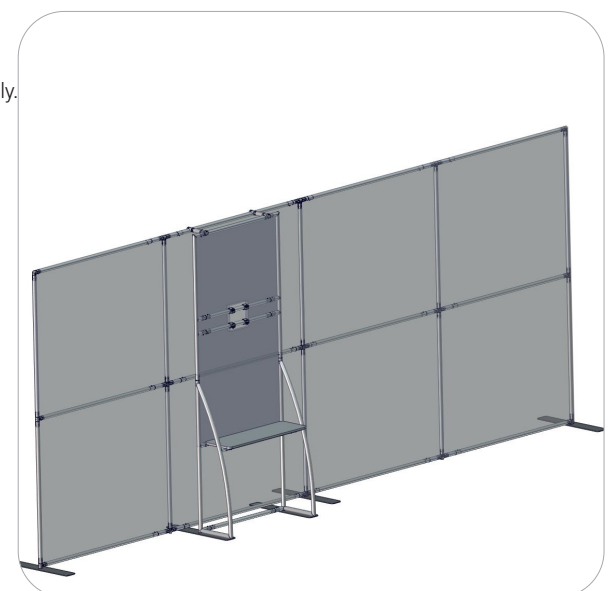Zippers on the sides of the frame.

Bottom Of Frame

Step 3.

Connect the tube clamps onto Frame A and the backwall frame using the provided clamps.

Please reference Connection Method 4 for more information.

Step 4.

Backwall structure sold separately.

Kit Assembly

Step by Step:

Step 5.

Attach monitor using the MM-SM monitor bracket.